Instructions for
7300-SLA Air Hog™ Plus

Please read before use.

STOP

Register your product at http://www.mytee.com/support/register

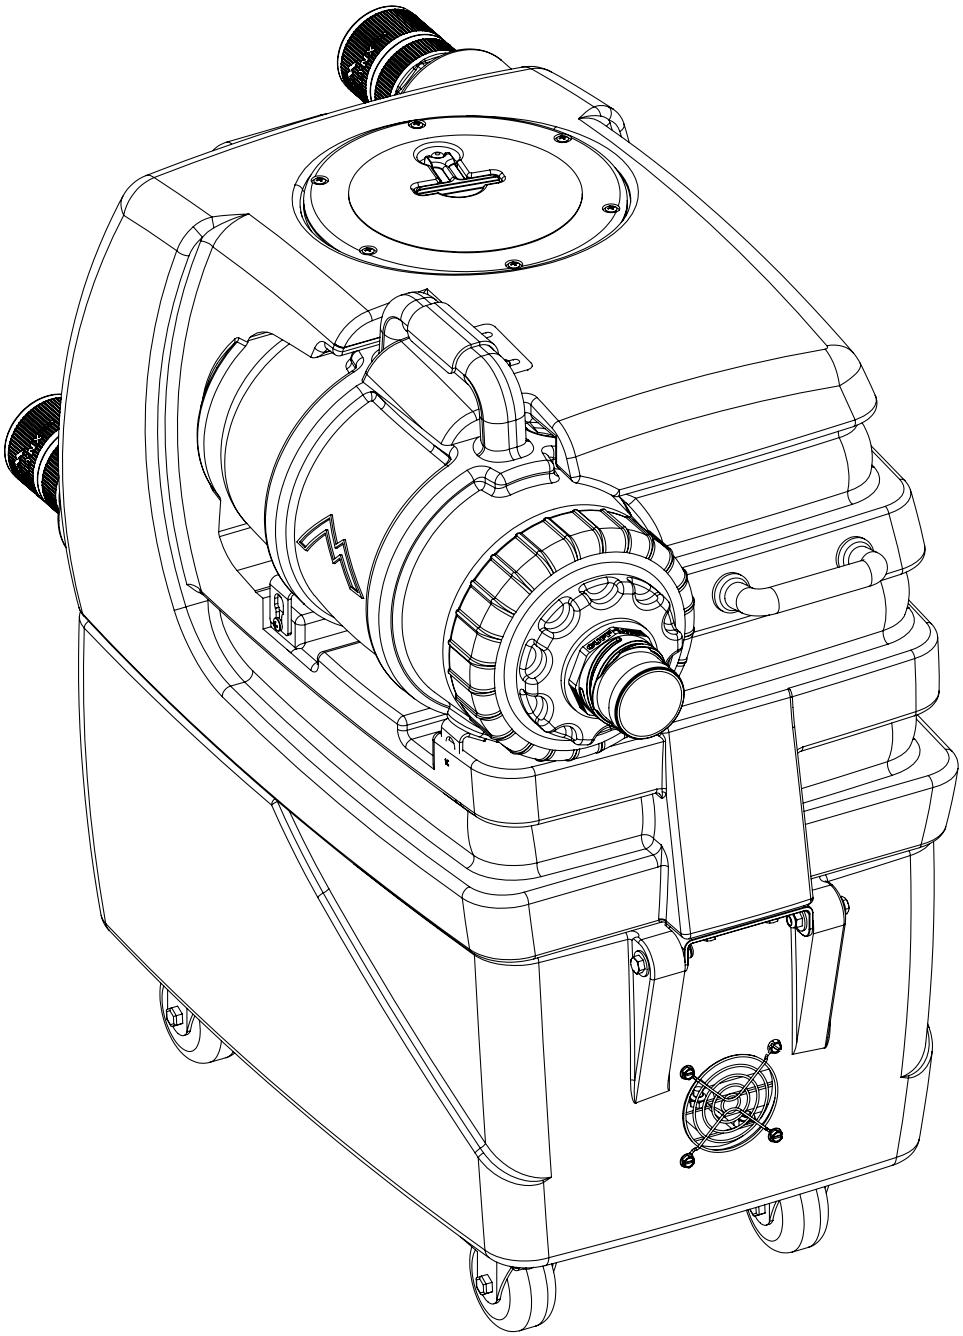

Set up p. 3
General information p. 9
Parts & pricing p. 12
Wiring diagram p. 14

Model # _____

Serial # _____

Form # ADP-7300

4-14

13655 Stowe Dr., Poway, Ca. 92064

7300-SLA FRONT

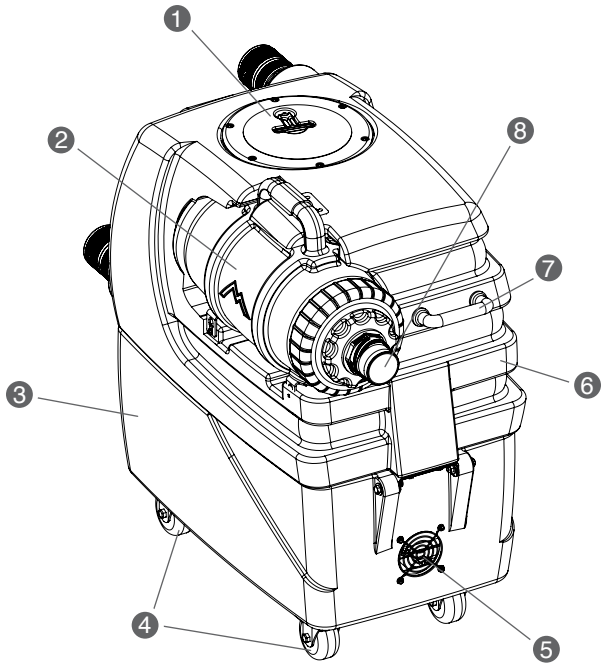

1. Clear “T” handle lid
2. Lint Hog™ filter housing
3. Base
4. 3” locking casters
5. Cooling fan
6. Recovery tank
7. Lift handle
8. 2” Male Cuff-Lynx™ starter

7300-SLA BACK

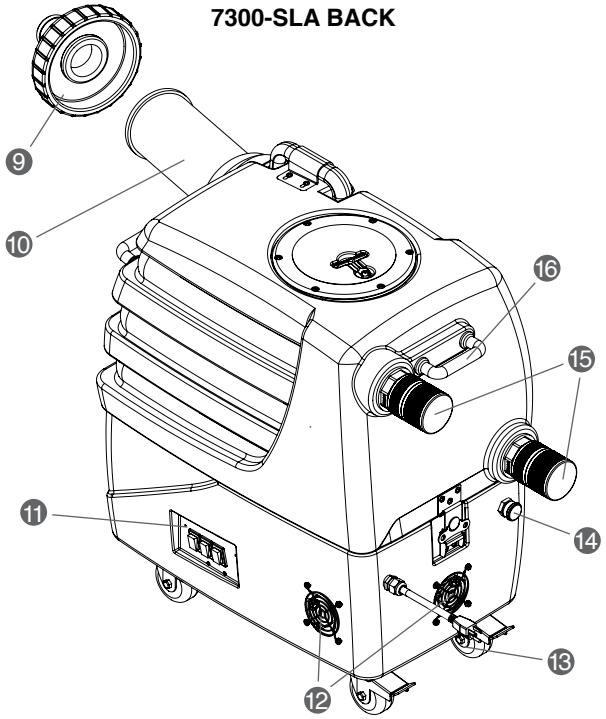

9. Lint Hog™ cap
10. Lint Hog™ filter
11. Switch plate
12. Vents
13. Dual cords
14. Pump-out
15. Cuff-Lynx™ plugs
16. Lift handle

7300-SLA ACCESSORIES

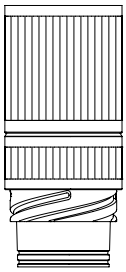

H136 - Coupler Swivel,
2” male x 2” female vac hose

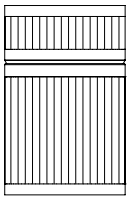

H110 - Coupler Swivel,
2” female x 2” female vac hose

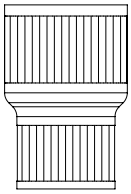

H141 - Reducer,
2” female x 1.5” female vac hose

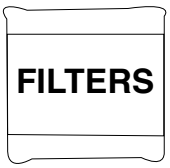

G008 - Pack of Piglet™
filters

REPLACING HOSE CUFFS WITH CUFF-LYNX™

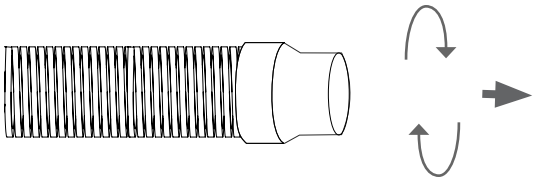

Twist clock-wise to remove standard cuffs.

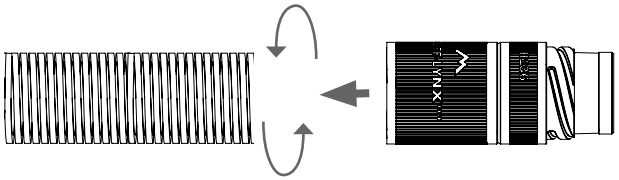

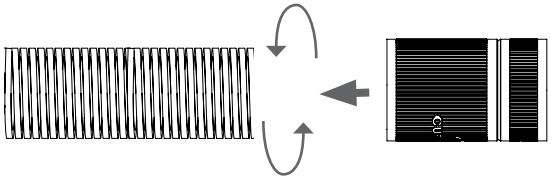

Twist counter clock-wise to attach Cuff-Lynx™ to vac. hose.

Once you receive your Air Hog™ Plus, you will need to replace the cuffs on your vacuum hose. To remove old cuffs, twist clock-wise. To attach either male, female or reducer Cuff-lynx™ to vacuum hose, twist counter clock-wise.

PIGLET FILTER & MESH FILTER

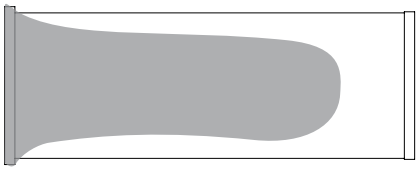

Insert one of the Piglet™ filters over the mesh filter opening for added protection. Once Piglet™ is added, insert mesh filter within the Lint-Hog™.

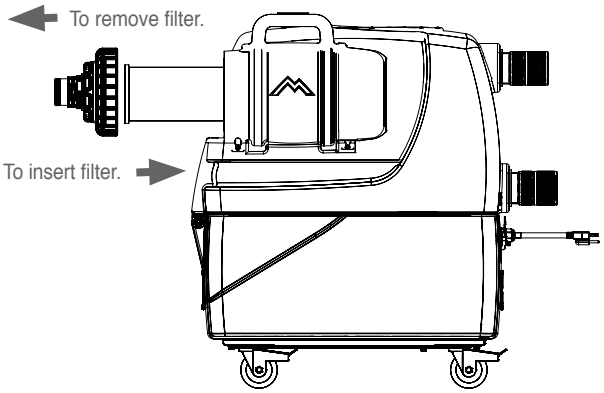

When the Lint Hog™ mesh filter fills up or you notice a change in performance, empty the unit, clean the mesh filter and replace Piglet™. Insert filter back in the Lint Hog™.

7300-SLA POWER CORD

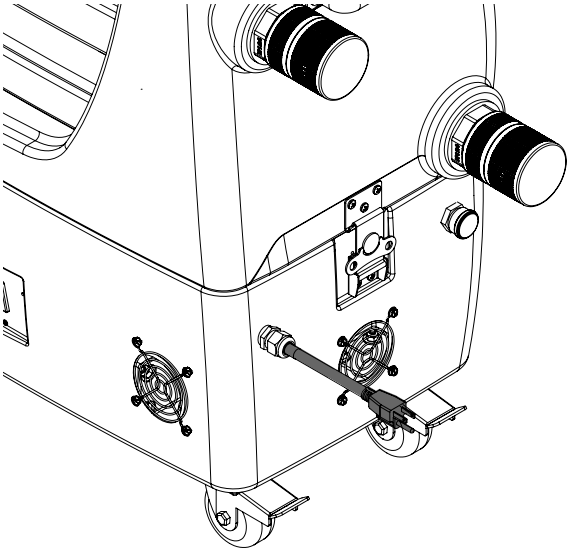

Plug the power cord into a 20A grounded wall outlet to use vacuum 1, vacuum 2 and pump-out.

7300-SLA SWITCHES

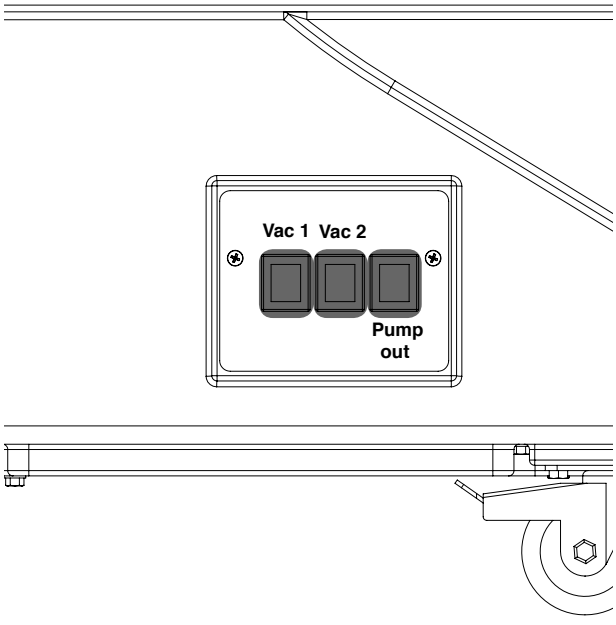

Located on the side of the Air Hog™ Plus, are the vacuum switches and pump-out switch. **For vacuums, use vacuum switches. Turn on the pump-out switch when using the pump-out feature.**

7300-SLA VACUUM HOSE CONNECTION

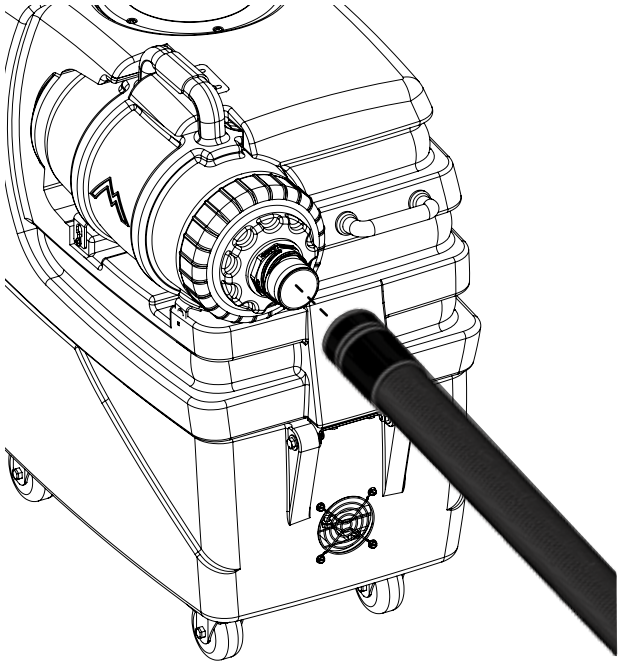

A vacuum hose attaches to the Lint Hog™ vacuum port in the front of the machine, using its male Cuff-Lynx™ connection. You will need a Cuff-Lynx™ coupler or reducer to attach the vacuum hose to the Air Hog™ Plus.

7300-SLA REAR VACUUM PLUGS

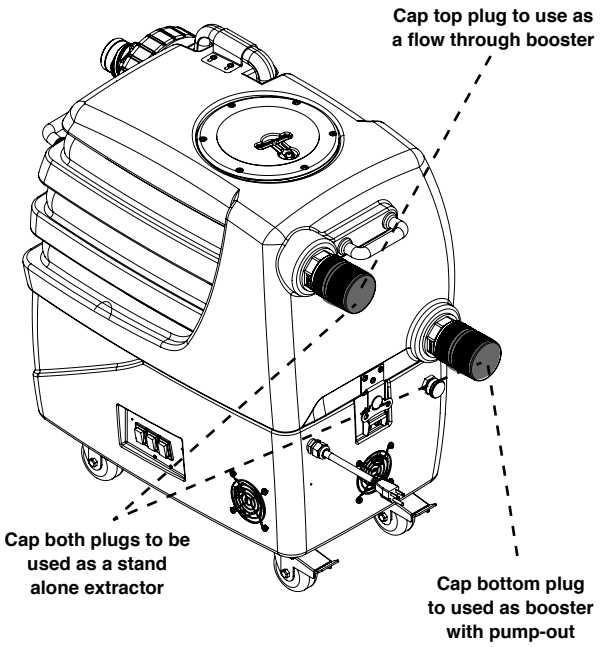

Two vacuum plugs are located in the back. The top and bottom rear plugs, depending on how they are capped, allow the Air Hog™ Plus to be used as a stand-alone extractor, a flow-through booster connected to another machine, or an in-line pump-out unit. They also seal the Air Hog™ Plus vacuum tank.

7300-SLA PUMP-OUT

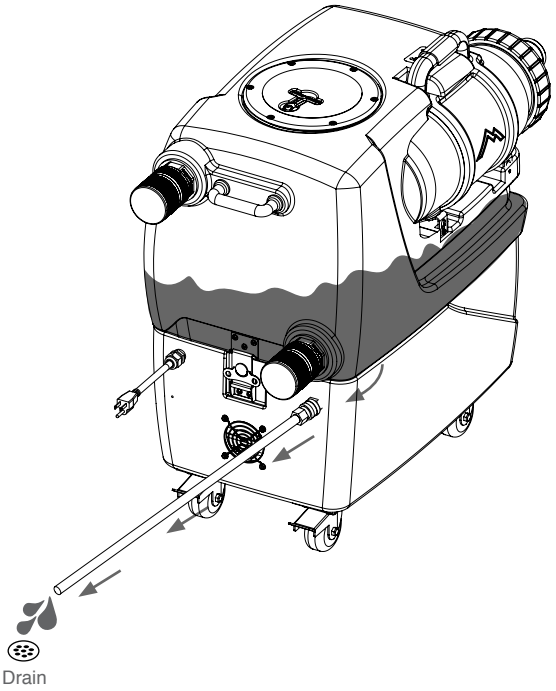

Attach a garden hose to the back hose inlet to pump dirty water from the tank. To use the pump-out, turn on the pump-out switch located on the side of the machine. When the pump-out is not in use, make sure the cap is on and securely tightened to prevent leaks.

7300-SLA ELECTRONIC FLOAT SWITCH

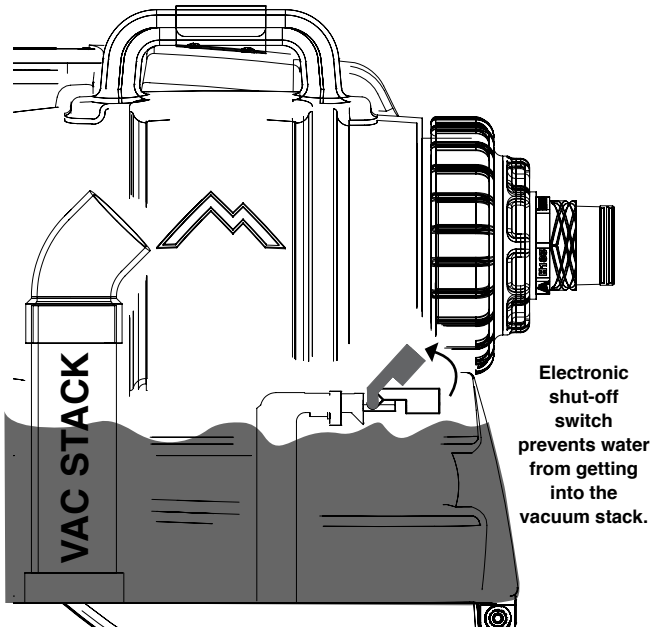

The Air Hog™ Plus features an electronic float switch inside the recovery tank. When the switch is activated by rising water in the recovery tank, the vacuum motors will automatically shut off. This will help to prevent water from being sucked into the vacuum stacks and damaging the motors.

7300-SLA CLEANING OF LINT HOG™, VAC STACK & PUMP-OUT FILTER

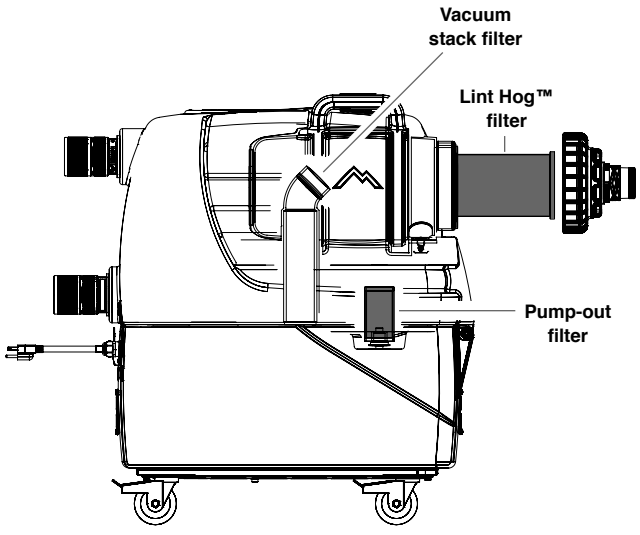

To clean the Lint Hog™ filter, twist off the cap and remove the stainless steel mesh filter and rinse with water. Do not strike unit against hard surface to remove debris, damage may result. Remove top lid for access to vacuum stack and pump-out mesh filters. Check often for debris build up. To clean, rinse with water and put back.

1. USING THE AIR HOG™ PLUS AS A STAND-ALONE LOW-PRESSURE EXTRACTOR

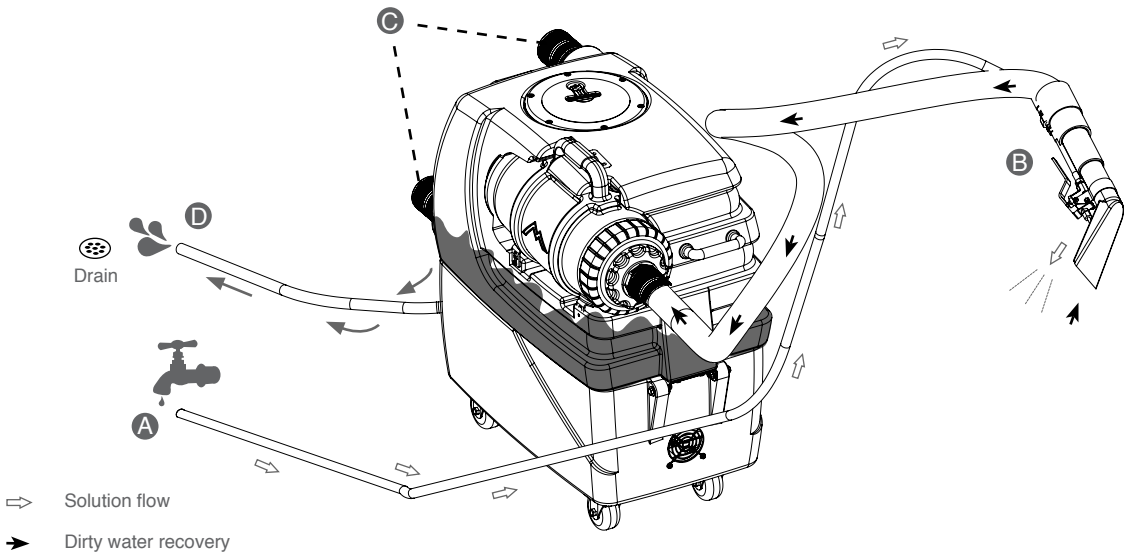

* Hoses & upholstery tool not included with Air Hog™ Plus

A. Connect one end of a solution hose to a faucet, and the other end to a cleaning tool. **B.** Connect a vacuum hose to the Air Hog™ Plus front vacuum port, and to an accessory such as an upholstery tool. **C.** Cap both rear vacuum plugs. **D.** Let the tank fill until vacuum is stopped by the electronic float switch, or use the optional pump-out feature by attaching a garden hose to the Air Hog™ Plus back hose outlet. Dirty water will automatically be pumped out. When the pump-out is not in use, make sure the cap is on and securely tightened to prevent leaks.

2. USING THE AIR HOG™ PLUS AS A STAND-ALONE HIGH-PRESSURE EXTRACTOR

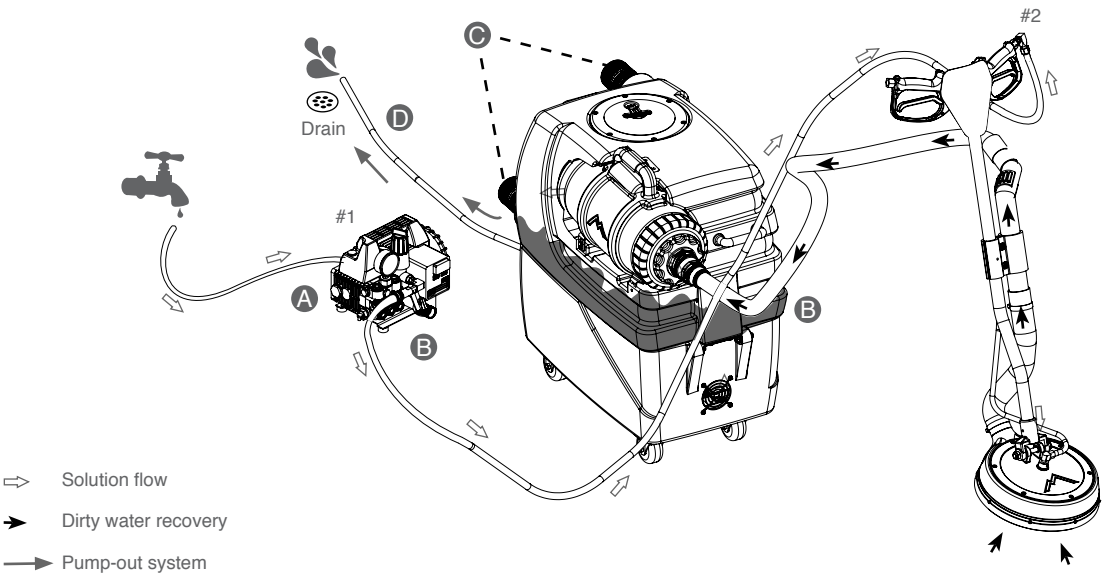

* Hoses, Spinner® & pressure washer not included with Air Hog™

A. Connect a pressure washer (#1), purchased separately, to a water source such as a faucet. **B.** Connect solution hose from a pressure washer to a cleaning tool, bypassing the Air Hog™ Plus. Connect one end of the vacuum hose to the front of the Air Hog™ Plus and the other end to an attachment such as a Spinner® (#2), purchased separately. **C.** Cap both rear vacuum plugs. **D.** Use the optional pump-out by attaching a garden hose to the back hose outlet and turning the pump switch on. When the pump-out is not in use, make sure the cap is on and securely tightened to prevent leaks. Water will rise until the electronic float switch is activated.

3. USING THE AIR HOG™ PLUS AS A BOOSTER WITH PUMP-OUT

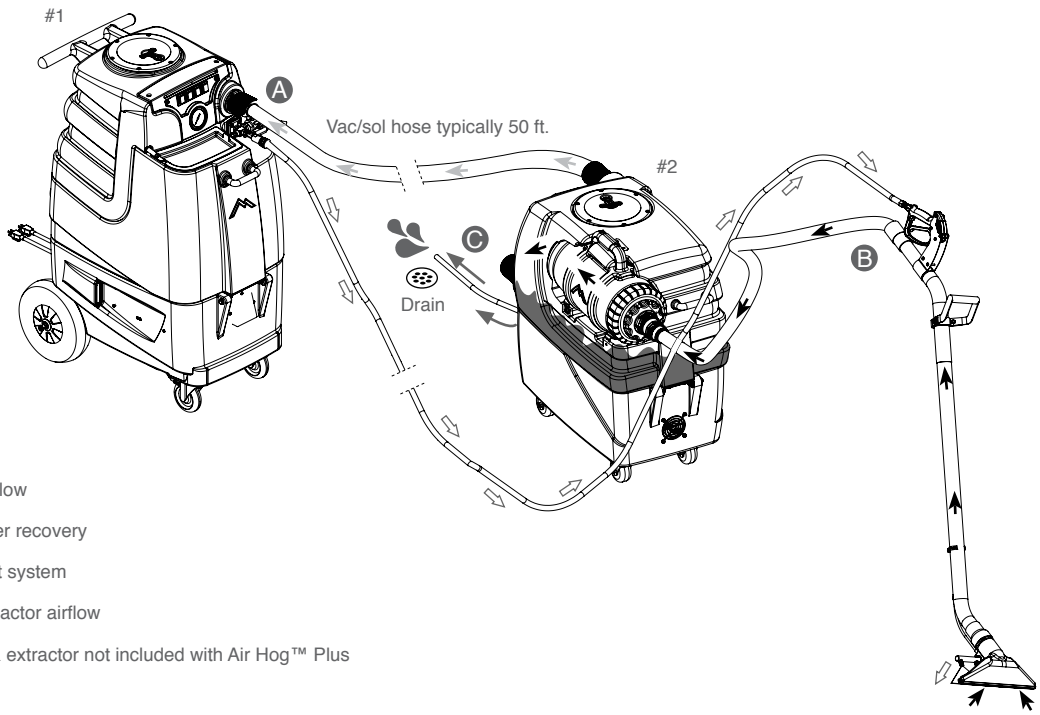

The optional pump-out can be used in conjunction with a second, larger extractor (#1), which will be used as a pressure source. A. Connect a vacuum hose from the Air Hog™ Plus rear top plug to the large extractor's vacuum inlet. Connect solution hose to the larger extractor (#1) and your cleaning tool's QD, a wand for example. Keep the bottom rear vacuum plug capped. **B.** Attach a vacuum hose to the wand's inlet and Air Hog™ Plus front vacuum port. **C.** To use the pump-out system, connect a garden hose to the back hose outlet. Turn on the pump-out switch, and dirty water will be automatically pumped out of the machine.

4. USING THE AIR HOG™ PLUS AS A BOOSTER AND PASS-THROUGH EXTRACTOR

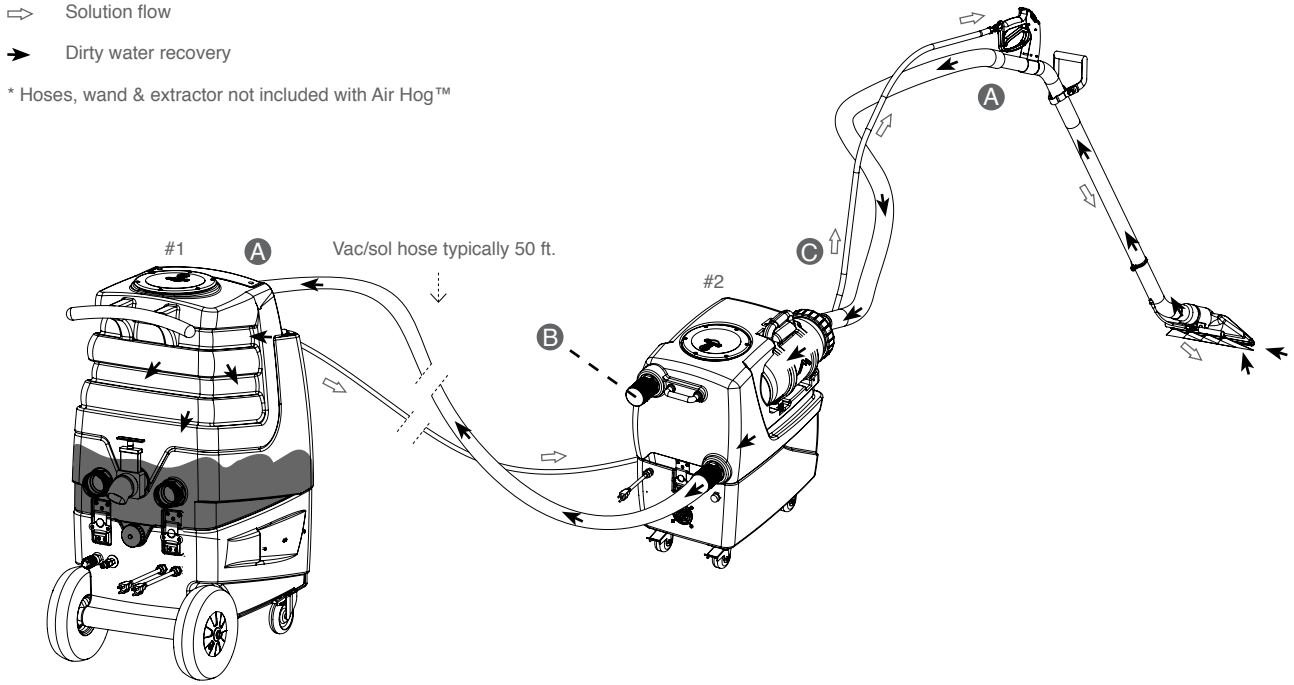

The Air Hog™ Plus (#2) can be used as a pass-through extractor and to boost the airflow of a second, larger extractor (#1) by increasing its CFM by 230. A. To use the larger extractor (#1) as a fresh water source and recovery tank, connect a vacuum hose to your large extractor and the rear bottom plug of your Air Hog™ Plus. Then connect a solution hose from your larger extractor to the QD of your cleaning tool (#2). **B.** Keep the top rear plug capped. **C.** Clean water will travel from the larger extractor through the cleaning tool to the cleaning surface, and dirty water will be drawn through the Air Hog™ Plus into the main extractor's recovery tank.

5. USE THE AIR HOG™ PLUS AS A "DAISY CHAIN" WITH PUMP-OUT FEATURE

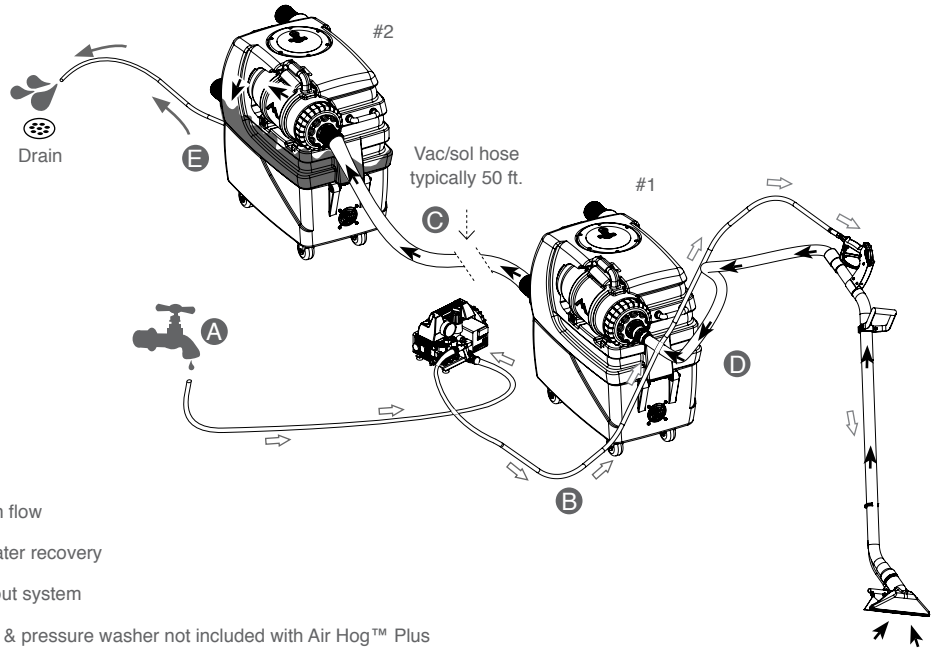

The Air Hog™ Plus (#1 & #2) can be connected by hoses as a "daisy chain". Each unit will increase the total CFM by 230. A. To connect two Air Hog™ Pluses along with a cleaning wand, connect one end of a garden hose to a faucet, the other end to a pressure washer. **B.** Using a solution hose, attach the male QD to a pressure washer and female QD to your cleaning tool. **C.** Add a second Air Hog™ to the daisy chain by connecting a vacuum hose from the front vacuum port of the #2 unit to the bottom rear vacuum port of the #1 unit. **D.** Attach the wand's vacuum hose to the front vacuum port and QD of the #1 Air Hog™ Plus. **E.** Attach a garden hose to the back hose inlet of the #2 Air Hog™ Plus. Turn on the pump-out switch to the #2 Air Hog™ Plus. Dirty water will be pumped out of the machine.

6. CREATE A "DAISY CHAIN" USING TWO AIR HOG™ PLUS UNITS AND A LARGE EXTRACTOR

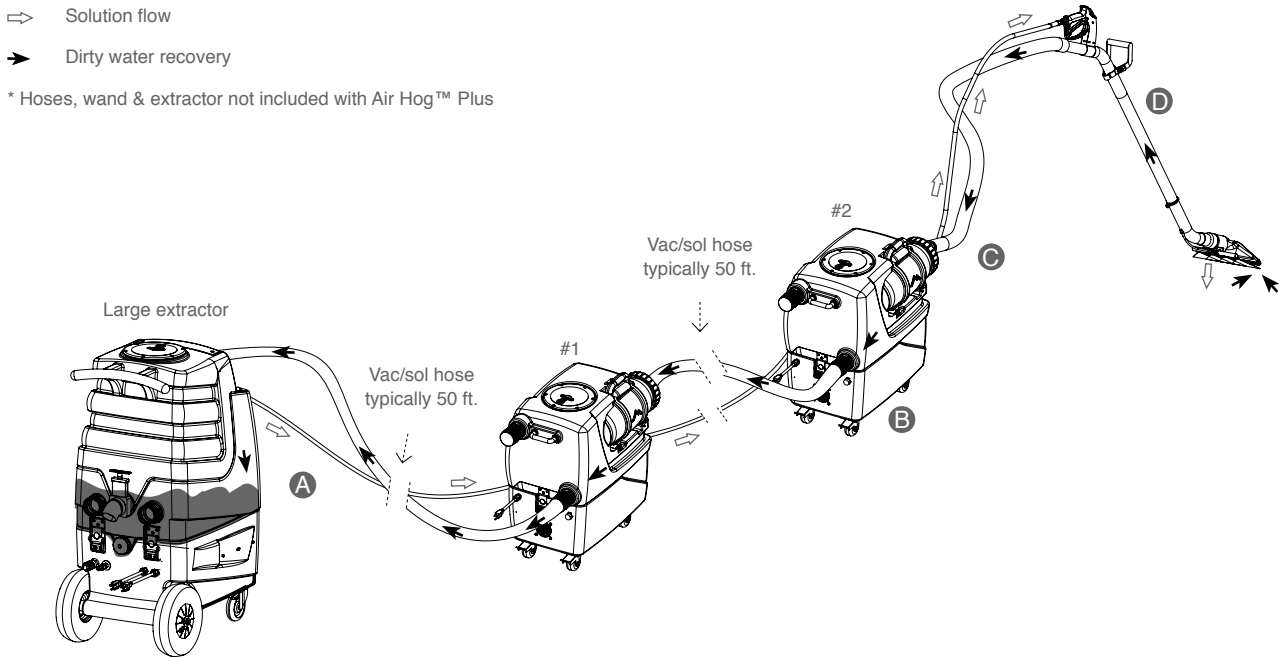

A. To operate using this set-up, use the large extractor as a fresh water source and recovery tank, connect a vacuum hose to the large extractor and the Air Hog™ Plus' (#1) rear bottom plug. **B.** Add an additional Air Hog™ Plus (#2) to the daisy chain by attaching a vacuum hose from the #1 Air Hog™ Plus to the #2 unit's bottom rear plug. **C.** Connect a vacuum hose from the front vacuum port of the #2 machine to the cleaning tool. **D.** To attach a wand, connect a solution hose to the large extractor. Connect a vacuum hose to the front vacuum port of the #2 Air Hog™ Plus. Clean water will travel from the large extractor through the wand to the cleaning surface, and dirty water will be drawn into the large extractor's recovery tank.

Dear Customer:

Congratulations on the purchase of your new 7300-SLA Air Hog™ Plus. As you are already aware, the scene of the equipment world is becoming more high tech, and we at Mytee Products Inc. strive to keep you on the cutting edge with superior quality and technology.

Keep in mind that the Air Hog™ Plus is a high performance machine, so neglect or abuse will cause unnecessary damage and void the warranty. However, with simple maintenance the 7300-SLA Air Hog™ Plus will give quality performance for many years to come.

If warranty questions arise, please consult user manual or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee Products Inc. Service Center. To see an updated list, visit our website at www.mytee.com

Before you begin using, please read your manual thoroughly.

Sincerely,
Mytee Customer Care Dept.

Grounding Instructions

This machine must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.

DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Figure 1 below. A temporary adapter illustrated in Figures 2 and 3 may be used~to connect this plug to a 2-pole receptacle as shown in Figure 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Figure 1) can be installed by a qualified electrician. The green colored rigid ear, tab or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. Grounding adapters are not approved for use in Canada.

Replace the plug if the grounding pin is damaged or broken.

The Green (or GreenYellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.

Please note for America use only

Figure 1

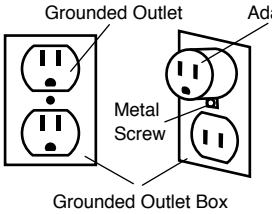

Figure 2

Figure 3

Parts and Service

Repairs, when required, should be performed by Mytee service personnel or Mytee authorized Service Center using Mytee original replacement parts and accessories. Call Mytee for repair parts or service. Please specify the model and serial number when discussing your machine.

Name Plate

The model and serial number of your machine are shown on the name plate located on the back of the machine. This information is needed when ordering repair parts for the machine. Use the space provided on the front cover to note the model and serial number of your machine for future reference.

Unpacking the Machine

When the machine is delivered, carefully inspect the shipping carton and the machine for damage. If damage is evident, save the shipping carton so that it can be inspected by the carrier that delivered it. Contact the carrier immediately to file a freight damage claim.

Caution and Warnings

Symbols

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.

DANGER

Is used to warn of immediate hazards that will cause severe personal injury or death.

WARNING

Is used to call attention to a situation that could cause severe personal injury.

CAUTION

Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.

WARNING

To reduce the risk of fire, electrical shock, or injury:
1. Read all instructions before using equipment.
2. Use only as described in this manual. Use only manufacturer's recommended attachments.
3. Always unplug power cord from electrical outlet before attempting any adjustments or repairs.
4. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
5. Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
6. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not use with damaged cord or plug. If cord is damaged, repair immediately.
8. Do not use outdoors or on wet surfaces and or standing water.
9. Always unplug or disconnect the appliance from power supply when not in use.
10. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
11. Do not use in areas where flammable or combustible material may be present.
12. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
14. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
15. Use extra care when using on stairs.
16. To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.
17. The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
18. When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.
19. Do not leave operating unattended.

Pre-Operation

1. Remove furniture and other items from the area you are going to clean.
2. Vacuum area and remove debris.
3. Protect cabinets, walls and painted surfaces with drop cloths or plastic.
4. Inspect power cord for damage.

Operating Instructions

1. Plug into two separate circuit 20-amp, grounded circuits. Non GFI recommended.
2. When using the vacuum, turn on the vacuum switch.
3. When using the pump-out, turn on the pump-out switch.
4. When using a wand or other vacuum attachment, or using the Air Hog™ Plug as a standalone extractor, connect the vacuum hose to the front vacuum port in the on-board Lint Hog™ filter. A Mytee Cuff-Lynx™ coupler or reducer will be needed.
5. Connect the vacuum hose to the Air Hog™ Plus vacuum inlet.
6. When using the auto pump-out, attach a garden hose to the hose outlet, located on the back of the unit.

7. If auto pump-out is not used, let the tank fill until the electronic float switch stops the tank from filling. Empty tank.
8. When using with other machines, connect vacuum hose to one of two back vacuum ports (depending on usage), and solution hose from your base extractor to your cleaning tool.

After Use

1. Unplug.
2. Empty solution tank, if needed, rinse with clean water and dry.
3. Clean internal filters:
Pump-out filter - Remove lid on top of tank. Reach into tank and twist off pump-out filter using a counter-clockwise motion. Rinse and dry, replace and close lid.
Vacuum stack filter - Remove lid on top of tank. Reach into vacuum stack and remove round, mesh filter. Rinse and dry, replace and close lid.
4. Clean external Lint Hog™ filter on top of tank. Twist off housing lid. Remove stainless steel filter. Rinse to clean, dry and replace. Note: Do not strike unit against hard surface to remove debris. Damage may result.
5. Store in a clean, dry place.

Maintenance Schedule

Maintenance item	Daily	Once a week
Clean and inspect tank.	x	
Check power cords.	x	
Clean with all-purpose cleaner and cloth.	x	
Clean Lint Hog™ filter	x	
Flush with Mytee® System Maintainer to dissolve normal chemical build-up.		x
Clean with compressed air.		x
Clean pump-out & vacuum stack filters		x
Inspect for water leaks and loose hardware.		x

Trouble Shooting

There is no power.
1. Make sure the machine is plugged into the proper outlet.
2. Check the circuit breaker and reset. Other items should not run on the same circuit as the machine. The outlet circuit must be a minimum of 20-amps.
3. Check switch. If it is damaged, replace with OEM part.
4. Replace or repair loose wires.
5. Replace motor if damaged.

Pump-out does not work properly.
1. If filters are clogged, remove and rinse with clean water.
2. Check pump-out wiring. It may need to be reconnected.
3. Check pump-out switch, it may need to be replaced with OEM part.

Vacuum motor does not work properly.
1. Check to see that all vacuum hoses are tightly connected.
2. Check vacuum port caps in back to make sure they are tightened.
3. Insure vacuum lid is tightened.
4. Check that the electronic shut-off switch is in the operating position.
5. If electronic shut-off switch is activated (pointing 45º), empty tank of all water.
6. Check to see if rear plugs are tight and secure.

Water is leaking.
1. Make sure unit is unplugged before servicing.
2. If foam is coming out of the recovery tank, use a low foaming detergent and/or defoaming agent.
3. Check to make sure debris has not been sucked through vacuum stack into the motor. Pre-vacuuming prevents this situation.
4. If a vacuum hose is leaking, make sure Cuff-Lynx™ and Lint Hog™are securely tightened.
5. Check hose fittings.
6. Insure all brass fittings are tightened.

FAQs

Q – What does the Air Hog™ Plus weigh and what are the dimensions?
A – Weight is 79 lbs. and dimensions are 32.5” x 17.5” x 30.5”.

Q – What comes standard with the Air Hog™ Plus?
A – Lint Hog™ debris filter, internal stainless steel filter, built-in Cuff-Lynx™ hose connections, 25’ power cord, roto-molded polyethylene body, 6” non-marking wheels, 2” non-marking casters. Also includes the following additional Cuff-Lynx™ hose connections:
· Part No. H136 – 2” male swivel coupler, connects to 2” female vacuum hose.
· Part No. H141 – 2” female reducer, connects to 1 ½” female vacuum hose.
· Part No. H110 – 2” female swivel coupler, connects to 2” female vacuum hose.

Q – Where do I plug in the machine?
A – Two separate 20-amp grounded curcuits are required.

Q – What machines are recommended for use with the Air Hog™ Plus?
A – The Air Hog™ Plus can be used to boost the CFM of any extractor with a single 3-stage or higher vacuum motor, including Mytee’s® M-Series™, HP, Contractor’s Special™, Speedster®, and Breeze™ models. Can also be used with a pressure washer for increased water lift.

Warranty

Mytee Limited Warranty Policy
Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. (Mytee) or any authorized Mytee distributor/service center with this limited warranty.

This limited warranty begins on the date of the customer purchase and is valid and available to the original purchaser only. Mytee products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, PRODUCTIVENESS, INFRINGEMENT, OR OTHER MATTER, OF ANY GOODS WHICH MYTEE SHALL SUPPLY. THERE ARE NO WARRANTIES, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEES GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE.

90-DAY PARTS AND LABOR LIMITED WARRANTY: Mytee will cover parts and labor on all components for 90 days from the date of original purchase. This warranty covers the cost of replacement and labor only, and does not cover shipping costs.

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. Wear parts are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, thermostats, plastisol parts, filters, bearings, brushes, solenoids, O-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytees sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

1-YEAR MAJOR COMPONENTS WARRANTY: Mytee warrants that pumps, vacuum and floor machine motors, and heaters are covered for a one (1) year limited warranty from the date of original purchase. This warranty does not apply and is void if the pump, vacuum motor, or heater has worn brush motors, water damage, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement only, and does not cover shipping or labor costs.

HOUSING LIFETIME LIMITED WARRANTY: Mytee warrants that all rotationally molded housing and tanks will be free from manufacturing defects, defects in workmanship, and defects in material for the life of the part. Replacement cost does not include the cost of shipping or labor.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED. IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration of design, use of incompatible or corrosive chemicals, use in a rental service, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center. Mytee may make changes in products it manufactures and markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured.
Mytee has no obligation to honor the limited warranties set forth herein unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be limited by law, then that provision or portion shall be construed to make it effective within the bounds of law. For example, if there are legal limitations on the duration of warranties, the warranties made herein shall be construed to have the minimum duration required by law, or, if there are legal limitations of exclusion of remedies, the exclusions made herein shall be construed to apply to the fullest extent possible without violating the law.

The validity, construction and performance of this warranty policy shall be governed by the laws of the State of California, without respect to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to this warranty policy shall be in the State of California and no legal action shall be commenced elsewhere.

Return Material Authorization Procedure

It is the responsibility of any Authorized Service Center (ASC) or distributor with written authorization to ensure the customer's equipment is repaired as soon as possible. Only Mytee Products Inc. or it's authorized dealers with written authorization, service centers, and agents may make warranty repairs on these products. All others do so at their own risk and expense.

The Distributor must follow Mytee Products, Inc. standard RMA procedure:

1. When a repair falls within the warranty time period for a piece of equipment, the distributor will fill out a RMA/warranty claim form. This form will act as a repair order to replace any defective parts.

2. All defective parts must be returned to Mytee Products, Inc. with the RMA/claim form for evaluation at the customer's expense. This shipping is non-refundable. All warranty claims are subject to an evaluation by Mytee Products, Inc. to determine if warranty will be approved. Any credit for repair and/or parts will only be issued upon evaluation and approval from Mytee Products, Inc.

3. When warranty is approved, the distributor's account will be credited for the replacement part(s). Mytee Products, Inc. will ship the warranted replacement part(s) to the distributor prepaid. If warranty is denied the distributor's account will not be credited for any parts sent for this claim.

7300-SLA AIR HOG™ PLUS PARTS & PRICING

ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
1	H135	Cuff-Lynx, 2" m cuff x 2" mpt	1	$3.99 ea
2	P561	cap, 6", threaded, w/ 2" npt	1	$23.99 ea
3	G031	gasket, 3.25" i.d. x 5.88" o.d.	1	$6.99 ea
4	H359	basket, strainer, 4.5 DIA x 12.5	1	$36.99 ea
5	H231	screw, 10-32 x 1" phil pan head, s/s	4	$0.99 ea
6	H081	lower bracket, tm booster	2	$1.99 ea
7	P563A	body, lint hog, new style	1	$34.99 ea
8	G004-A	gasket, vac motor - Mytee Lite	3	$6.99 ea
9	P567	adapter, pvc, 2" fslip x 2" mpt	1	$4.99 ea
10	A926	elbow, inlet assembly 2"	1	$15.99 ea
11	H230	screw, 10-32 x 1/2" phil pan head, s/s	13	$0.99 ea
12	H082	upper bracket, tm booster	1	$2.99 ea
13	E373	level switch, vacuum shut-off, rear threads	1	$8.99 ea
14	P680	elbow, pvc 1/2" fmt x 1/2" fms	1	$2.00 ea
15	P677-5	pipe, pvc, 1/2" x 20'	1	$1.99 ft
16	P572	adapter, pvc, 1/2" fslp x 1/2" mpt	1	$7.99 ea
17	P679	adapter, pvc, 1/2" fpt x s	1	$3.99 ea
18	H210	washer, 1/4" flat, s/s	18	$0.99 ea
19	H213	washer, 1/4" lock, s/s	2	$0.99 ea
20	H201	bolt, 1/4-20 x 1/2", hex head, zinc	2	$0.99 ea
21	H216	nut, lock, 1/4-20, nylon insert, s/s	14	$0.99 ea
22	H333	mesh filter, auto dump, 1/2" npt	1	$12.99 ea
23	B210	bushing, brass, 1/2"mpt x 3/8" fpt, hex	1	$2.49 ea
24	H299	washer, 11/16"id x 1-1/2"od x .075, s/s	4	$0.99 ea
25	B216	nipple, brass, 3/8" x close	1	$1.99 ea
26	B236	elbow, brass, 90 deg, 1/2" barb x 3/8" fpt	1	$14.49 ea
27	P684	adaptor, pvc 2, fmsl x fmt	1	$6.99 ea
28	P682-9	pipe, pvc, 2"	1	$7.99/ft
29	P683	elbow, 45 deg, 2" pvc	1	$8.99 ea
30	G021	screen, mesh filter, 2-3/8" dia	1	$4.99 ea
31	G022	filter, foam, 2-3/8" x 1"	1	$2.99 ea
32	H316	bolt, 1/4x1-1/2", hex head zinc	2	$0.99 ea
33	H379	bracket, front, small	1	$3.99 ea
34	P537	tank, truckmount booster	1	$215.00 ea
35	H124	Cuff-Lynx, 2" mpt x 2" female cuff	3	$3.99 ea
36	H121	cuff-lynx, 2" plug	2	$3.99 ea
37	H768	bolt, 1/4-20 x 3/4" serrated hex flange, zinc	14	$0.99 ea
38	H211	washer, 1/4"id x 1"od, flat, s/s	4	$0.99 ea
39	G052	washer, buna 1-1/8" od x 3/16" id	4	$1.99 ea
40	H485	handle, breeze and dx	2	$6.99 ea
41	G091	gasket, 7", vac lid	1	$11.99 ea
42	G090	lid, vac tank, clear, 7"	1	$36.99 ea
43	H304	screw, #8 x 5/8 phil oval, s/s	6	$0.99 ea
44	PH615-25	sol hose, 1/2", 3045psi, black	1	$8.99 ft
45	C381	pump out, 115v	1	$187.49 ea
46	H273	nut, kep, #10-32 zinc	14	$0.99 ea
47	H185	screw, 10-32 x 1-1/4", phil flat full thread, black oxide	4	$0.99 ea
48	PH615-8	sol hose, 1/2", 3045psi, black	1	$8.99 ft
49	B173	ferrule, 1/2", brass	4	$0.99 ea
50	B132	adapter, brass, 1/2" barb x 1/2" mpt	1	$9.49 ea
51	B270	coupling, 3/4" fpt x 1/2" fpt	1	$14.99 ea
52	B271	bushing, hex, 3/8" mpt x 1/2" fpt	1	$6.99 ea
53	B205B	QD, 1/2" npt x 3/4" mgh, pump-out	1	$3.99 ea
54	B204	qd, 3/4" female x female garden hose	1	$9.99 ea
55	B221	plug, brass, 3/4", garden hose	1	13.99 ea
56	H194	coupler, 2" dia x 2.5" length, s/s	1	$10.00 ea
57	H020	nut, lock, 2", steel	1	$4.99 ea
58	H486	latch, front	1	$13.99 ea
59	E512B	light, indicator, 125v (amber)	1	$9.99 ea
60	E550	power cord, pigtail, 30", 12/3, black	1	$11.49 ea
61	H220	fitting, strain relief, cord	1	$3.19 ea
62	H221	nut, lock, 1/2" steel	1	$1.99 ea
63	G068	bumper, 7/8" x 1/4" head	1	$1.99 ea
64	P571	base, tm booster	1	$164.99 ea
65	E564	controller, circuit light	1	$62.99 ea
66	H186	screw, 10-32 x 3/4, phil flat full thread	4	$0.99
67	H636	plate, switch,8070, hp60, 7300	1	$6.99 ea
68	H389	screw, 10-32 x 1/2" SHCS, alloy	1	$0.99 ea
69	E515	switch, rocker, 2 position	3	$13.99 ea
70	E370	controller, water level, dual pump or vac	1	$94.99 ea
71	C317	fan, cooling, 115V	1	$21.49 ea
72	H343	screw, 10 x 5/8" hex head, zinc	12	$0.99 ea
73	H296	guard, cooling fan, wire	3	$2.99 ea
74	H342	bolt, 1/4-20 x 1" hex head, s/s	8	$0.99 ea
75	H667	caster, 3", Black Hub, Gray Tread	2	$14.99 ea
76	H227	axle, 15.60" x .50" dia	1	$9.99 ea
77	H239	wheel, 8"	2	$28.99 ea
78	H042	c-clip, 12mm, external	2	$0.99 ea
79	H253	plate, dual manifold, 9" x 13"	1	$14.99 ea
80	PH628-11	vac hose, 2", black, wire reinforced	3	$8.99 ft
81	H501	vac support, 3 stage, 4-1/16"	6	$4.99 ea
82	C302LA	vac motor, 3 stage, low amp	2	$139.99 ea
83	P685	inlet, 2"	1	$10.99 ea
84	H217	clamp, hose, 2-1/4 dia	5	$1.49 ea
85	H544	cuff hose, 2 X 2, wire reinforced	1	$12.49 ea
86	H202	bolt, 1/4x20x3/4" hex head	6	$0.99 ea
87	P735	manifold, single vac, no gasket	2	$14.99 ea

ITEMS NOT SHOWN

PART NO.	DESCRIPTION	Q.TY.	MSRP
H141	Cuff-Lynx, 2" to 1.5" reducer	1	$3.99 ea
G008	piglet filter	1	$6.29 pak
G076	filter bag, 3.5" metal O-ring, mesh bag	1	$4.99 ea
H110	Cuff-Lynx, 2" hose x 2" fem swivel Cuff-Lynx	1	$3.99 ea
H136	Cuff-Lynx, 2" hose x 2" male swivel Cuff-Lynx	1	$3.99 ea
E530	power cord, ext, 50', 12/3 black	1	$74.99 ea
AD127	stop sign, register your product	1	n/a
ADM-7300	manual, tm vacuum booster	1	n/a

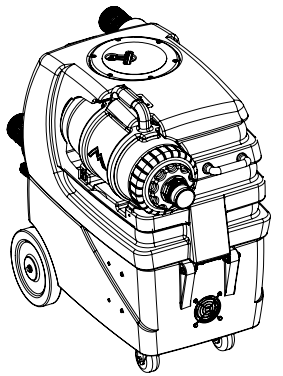

Order parts at: www.mytee.com/products/7300-s-air-hog-plus-vacuum-booster

Part prices are subject to change.

	NAME	DATE
DRAWN	M.LaBarbera	2/2014
CHECKED		

COMMENTS:

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF MYTEE PRODUCTS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF MYTEE PRODUCTS, INC. IS PROHIBITED.

mytee PRODUCTS, INC.
858-679-1191

TITLE: Booster, TM

SIZE	DWG. NO.	REV
C	7300-SLA	OD

SCALE: 1:32 | DO NOT SCALE DRAWING | SHEET 1 OF 3

7300-SLA AIR HOG™ PLUS PARTS & PRICING

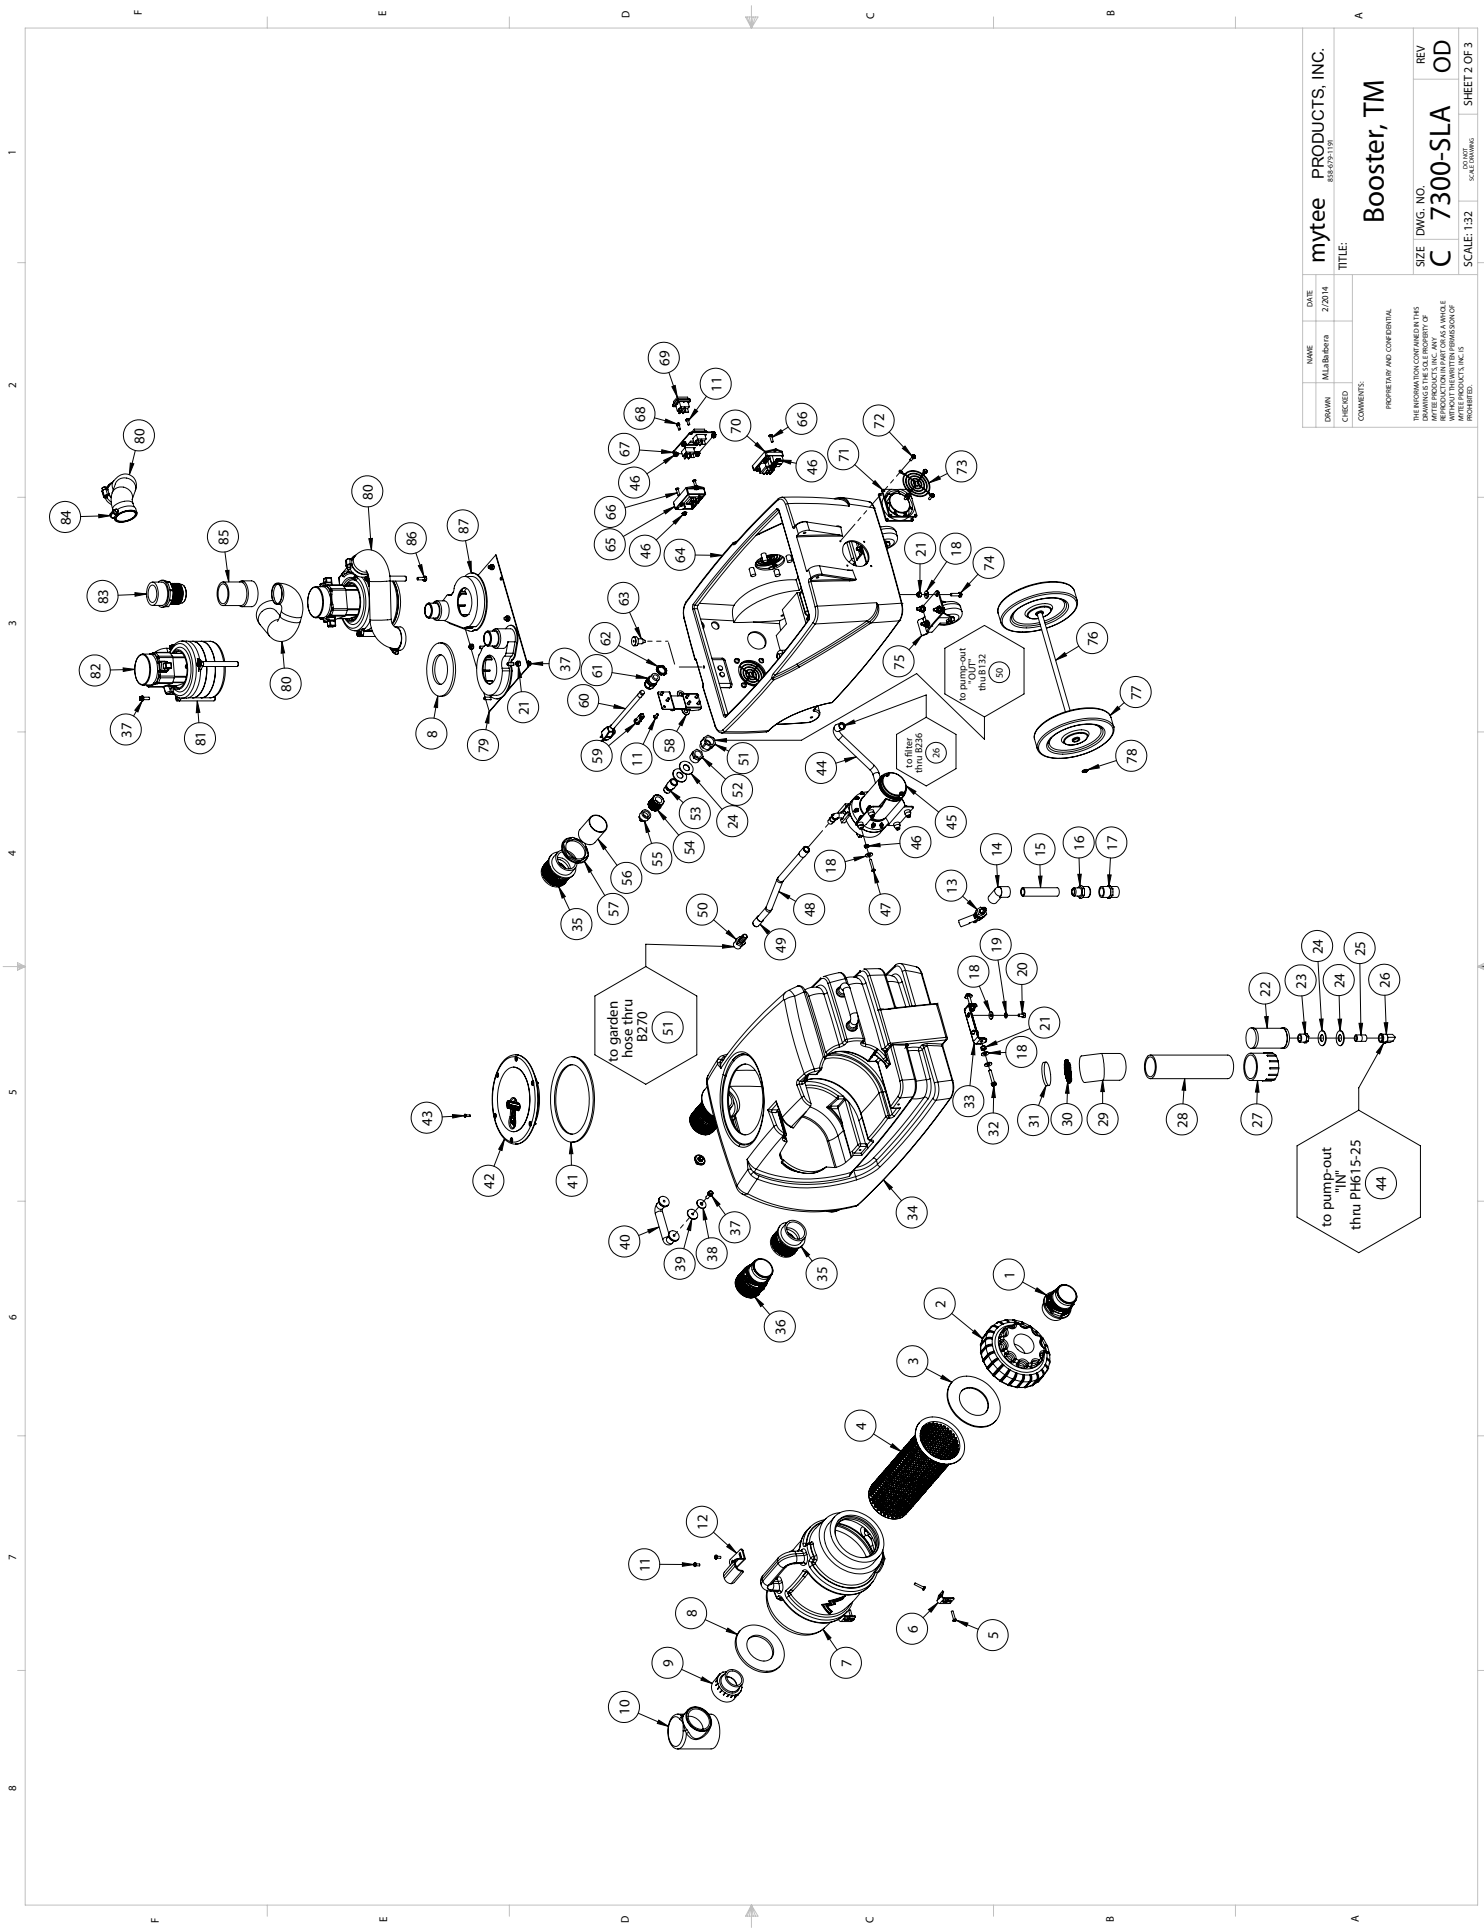

7300-SLA AIR HOG™ PLUS WIRING DIAGRAM

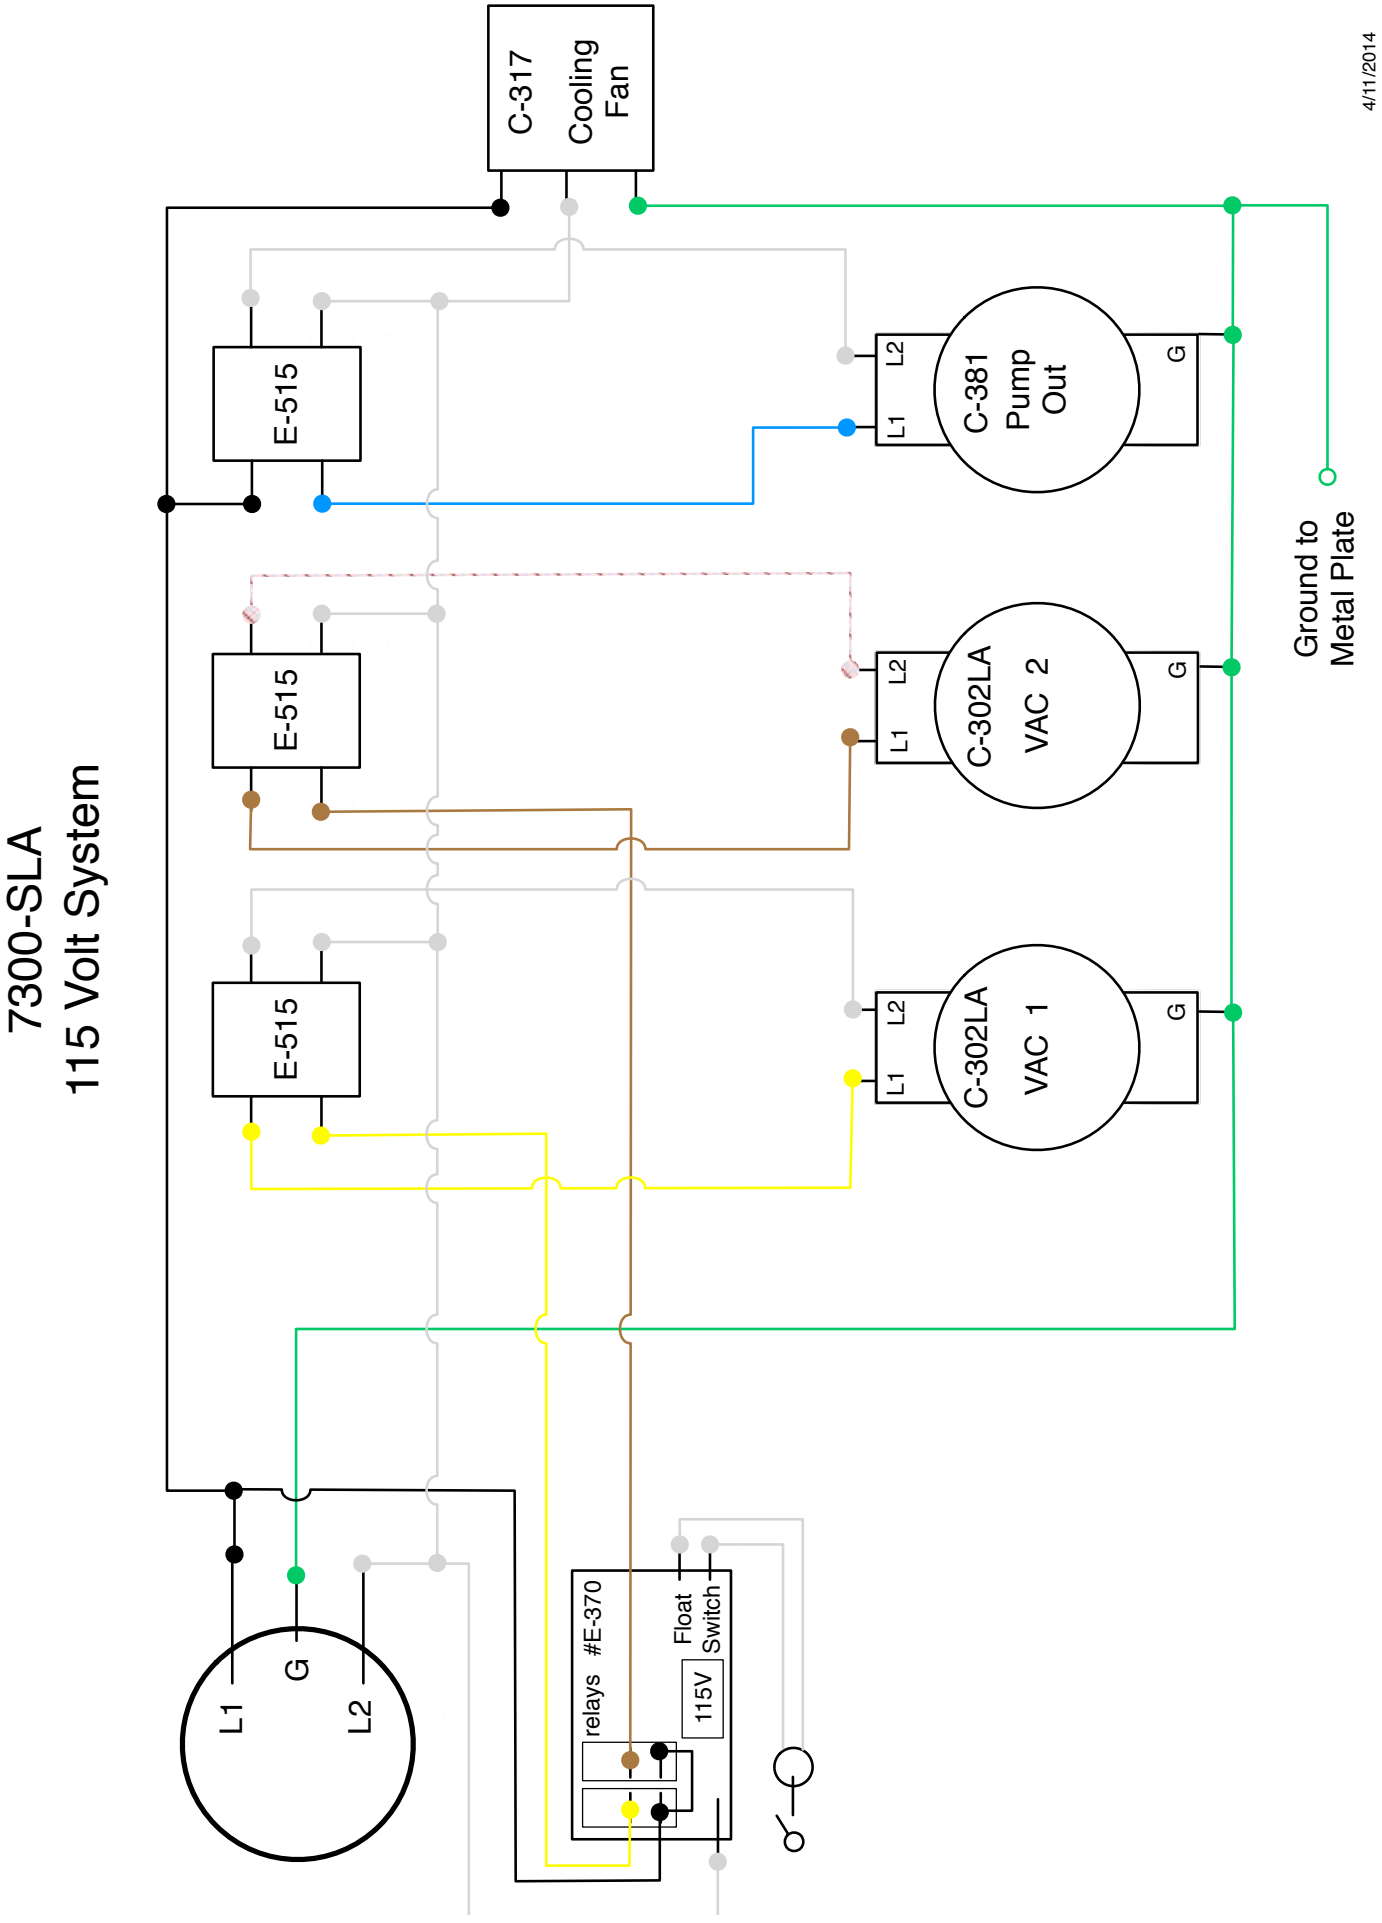

NOTES

NOTES

Mytee Products Inc.
13655 Stowe Dr.
Poway, Ca. 92064
www.mytee.com
© 2014 Mytee Products Inc.
Printed in the U.S.A.